



KEY NOTE:

- ① PROVIDE CURRENT TRANSFORMER IN FAN POWER CIRCUIT TO MONITOR OPERATION OF EXHAUST AT ANY POINT IN TIME. ADD EXHAUST AIR CFM (A VARIABLE) TO DDC EQUATION USED TO CONTROL RETURN AIR CFM TO AIR HANDLING UNIT SERVING AREA IN WHICH EXHAUST FAN IS LOCATED. OBTAIN ACTUAL EXHAUST FAN CFM VALUE FROM THE AIR BALANCER.

2355 SUPPLY OR EXHAUST FAN
SCALE: NTS