


- NOTES:**
- FOR WALL MOUNTED APPLICATIONS, DO NOT MOUNT THE DISCONNECT OR STARTER DIRECTLY TO THE WALL, PROVIDE A STRUT MOUNTING RACK, SIMILAR TO DETAIL ON THE WALL, AND MOUNT EQUIPMENT ONTO THE STRUT RACK.

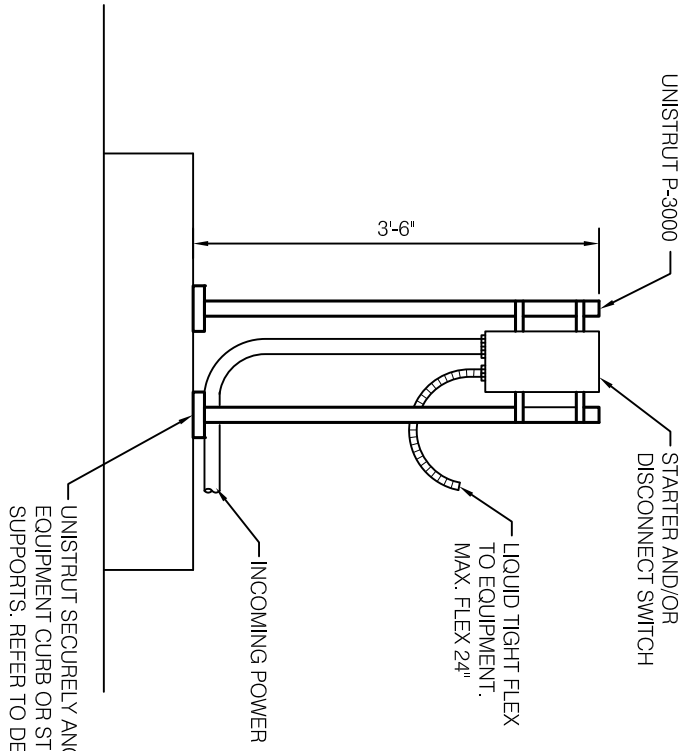

2621 FREESTANDING DISCONNECT RACK
SCALE: NTS