










 



## ELECTRICAL MOTORIZED AND HVAC EQUIPMENT SYMBOLS:

<u>PREFERRED SYMBOL</u>	<u>DESCRIPTION</u>
xxA 	SWITCH - DISCONNECT
$\frac{xxAF}{yyAT}$ 	SWITCH - DISCONNECT FUSED
$\frac{xxAF}{yyAT}$ 	ENCLOSED CIRCUIT BREAKER
	MAGNETIC CONTACTOR
	ADJUSTABLE SPEED DRIVE
	SWITCH - MOTOR STARTER
RV  NEMA x	MAGNETIC MOTOR STARTER
 $\frac{NEMA\ x}{xxA-xP}$	SWITCH - COMBINATION MAGNETIC STARTER AND DISCONNECT
	AUTOMATIC TEMPERATURE CONTROL PANEL
	EQUIPMENT CONTROL PANEL
	RELAY
	SWITCH TOGGLE DISCONNECT
	SWITCH - THERMAL MOTOR